

FTS PRIMECENTER Rack 12U/24U/38U/46U

System configurator and order-information guide

June 2012

Contents

Configurator diagram Configuration Examples KVM S2-1 TXF Config Information IB Switch LAN Cabling IB Cabling Data Sheet Smart UPS General rack accessories Change Report



PRIMERGY Server

Configuration and order process informations

This document contains technical background information for the installation of servers and components into the PRIMECENTER Rack.

Please use the latest version of System-Architect for configuration. The System-Architect, a configuration tool with graphical user interface, enables you to gain an overview over the required configuration even while planning the system. A simultaneous examination of consistence ensures completeness and functionality of the required system.

For the latest tools please go to: http://extranet.fujitsu-siemens.com/fsc/products/configuration/main-e.htm

Further information in the internet see: <u>http://ts.fujitsu.com/products/standard_servers/rack_technology/index.html</u> (internet) <u>https://partners.ts.fujitsu.com/com/order-supply/configurators/primergy_config/current/Pages/default.aspx</u> (extranet)

With your rack order, please absolutely send the Rack-Architect picture and the filled-in cable plan.

Additionally to each rack-order the rack-check list has to be filled in, see:

http://configurator.ts.fujitsu.com/public/information/Rack-Checkliste.xls

Please send your desired configuration from the rack architekt and the form sheet for external connections and hard disk configurations with the respective order numbers additionally to your order in SAP.

You can e-mail it to the following address (.xls or .sar):

To: Fujitsu Technology Solutions GmbH CL OM Zentral Functions Konfig-Team

 Tel no.
 +49 (0) 821 / 804-3362

 e-mail:
 rack-check@ts.fujitsu.com

Rack assembly at customer site:

stacked versions will be delivered separately; max permitted stacked hight is 50 U.

The 12U, 24U and 38U racks will be delivered fully equipped, whilst the 46U racks will be delivered with mounting kits and cabeling preinstalled, if the service "rackmounting ex factory" (SNP:SY-F1647E301-P) was ordered for each Server and Subsystem.

The on-site service has to be requested for power installation and in case of the 46U racks for server installation at the customers site. This service is not included in the price of the rack.

Rack-configurations with PRIMERGY systems

S26361-K826-V101 S26361-K826-V102 S26361-K826-V103 S26361-K826-V104 PRIMECENTER Rack 12 U, stackable PRIMECENTER Rack 24 U, stackable PRIMECENTER Rack 38 U, stackable PRIMECENTER Rack 46 U basic cabinet (670 mm) according to basic cabinet (1220 mm) according to basic cabinet (1825 mm) basic cabinet (2220 mm) according to protection type IP00 with side panels, to protection type IP00 with side panels, protection type IP00 with side panels, protection type IP00 with side panels, lockable front- and back-door. lockable front- and back-door. lockable front- and back-door. lockable front- and back-door. Including tilting protection Including tilting protection Including tilting protection Including tilting protection Horizontal self-ventilation Horizontal self-ventilation Horizontal self-ventilation Horizontal self-ventilation incl. mounting-kit for stack fixing Mounting frame 1x 2U vertical Mounting frame 2x 2U vertical Mounting frame 3x 2U vertical Mounting frame 3x 2U vertical Circumferential cable Circumferential cable Circumferential cable Circumferential cable management at the back, management at the back, management at the back, management at the back, cable outlet to the top, below, left and right. left and right. left and right. left and right. Addition of several racks without accessory, no personal variation. accessory, no personal variation. accessory, no personal variation. accessory, no personal variation. Basic rack without Basic rack without Basic rack without Basic rack without power connection; refer to part H/I for further informations and order numbers (connection concepts). numbers (connection concepts). numbers (connection concepts). numbers (connection concepts). HxWxD = 670 x 700 x **1000 mm** HxWxD = 1220 x 700 x **1000 mm** HxWxD = 1825 x 700 x **1000 mm** HxWxD = 2220 x 700 x **1000 mm** including: including: including: including: - installation preparation - installation preparation - installation preparation - installation preparation - packing - packing - packing packing - accessory pack including: - accessory pack including: - accessory pack including: Rack demounting server Server addition (var.installation material) Server addition (var.installation material) Server addition (var.installation material) ex factory Manual German / English Manual German / English Manual German / English - accessory pack including: Server addition (var.installation material) Manual German / English

S26361-F2735-L212 Remodelling kit, 24U, up to 1100mm depth Special configuration Hybrid-rack installation

has to be ordered once per rack Hybrid rack is a mixed PC-rack with PRIMERGY and PRIMEPOWER

S26361-F2735-L213 Remodelling kit 38

A

Α

A

Remodelling kit, 38U, up to 1100mm depth Special configuration Hybrid-rack installation has to be ordered once per rack Hybrid rack is a mixed PC-rack with PRIMERGY and PRIMEPOWER

S26361-F2735-L214 Remodelling kit, 46U, up to 1100mm depth Special configuration Hybrid-rack installation has to be ordered once per rack Hybrid rack is a mixed PC-rack with PRIMERGY and PRIMEPOWER

To avoid order problems, please send along the picture of the system-architect.



Mounting frame 2U vertical 1...3x

This mounting frame allows vertical installation of 3x (46,38U), 2x (24U) or.1x (12U) 2U 19" components with a depth less than 300 mm incl. cabeling. For sideward mounting you can use e.g. consolswitches, rack management systems etc. Mounting frame is **always included.** Free space has to be filled with dummy panels.

Rack-configurations with PRIMERGY systems

S26361-K826-V212	S26361
PRIMECENTER Rack 24 U, stackable	PRIMECE
basic cabinet (1220 mm)	basic cab
to protection type IP00 with side panels,	to protect
lockable front- and back-door.	lockable f
Including tilting protection	Including
Horizontal self-ventilation	Horizonta
Mounting frame 2x 2U vertical	Mounting
Behind rotation cable duct 210mm depth	Behind ro
unmuffle with removable cover	unmuffle
cable exhaust to the top, below,	cable exh
left and right.	left and rig
Addition of several racks without	Addition of
accessory, no personal variation.	accessory
Basic rack without	Basic racl
power connection; refer to part H/I	power cor
for further informations and order	for further
numbers (connection concepts).	numbers
HxWxD = 1220 x 700 x 1100 mm	HxWxD =
including:	including
 installation preparation 	- installa
- packing	- packing
 reinforced tilting protection 	- reinfor
 accessory pack including: 	- access
Server addition (var.installation material)	Server ad
Manual German / English	Manual G

-K826-V213

ENTER Rack 38 U, stackable pinet (1825 mm) tion type IP00 with side panels, front- and back-door. tilting protection al self-ventilation

frame 3x 2U vertical otation cable duct 210mm depth with removable cover haust to the top, below, ight. of several racks without ry, no personal variation. ck without onnection; refer to part H/I er informations and order (connection concepts). = 1825 x 700 x **1100 mm** g:

- ation preparation
- ۱g
- rced tilting protection

sory pack including: ddition (var.installation material) German / English

S26361-K826-V214

PRIMECENTER Rack 46 U, stackable basic cabinet (2220 mm) to protection type IP00 with side panels, lockable front- and back-door. Including tilting protection Horizontal self-ventilation Mounting frame 3x 2U vertical Behind rotation cable duct 210mm depth unmuffle with removable cover cable exhaust to the top, below, left and right. Addition of several racks without accessory, no personal variation. Basic rack without power connection; refer to part H/I for further informations and order numbers (connection concepts). HxWxD = 2220 x 700 x **1100 mm** including: - installation preparation - packing

- reinforced tilting protection
- accessory pack including: Server addition (var.installation material)
- Manual German / English



Α

Mounting frame 2U vertical 1...3x

This mounting frame allows vertical installation of 3x (46,38U), 2x (24U) or.1x (12U) 2U 19" components with a depth less than 300 mm incl. cabeling. For sideward mounting you can use e.g. consolswitches, rack management systems etc. Mounting frame is **always included.** Free space has to be filled with dummy panels.

Rack configurations with PRIMERGY systems

S26361-K826-V253 PRIMECENTER COM Rack 38 U, stackable


basic cabinet (1825 mm) to protection type IP00 with side panels, lockable front- and back-doors. Including tilting protection Horizontal self-ventilation Mounting frame 3x 2U vertical Additional 100mm cable area on right side exclusivly reserved for structured net cabling. via patch panels etc. Circumferential cable management at the back, cable outlet to the top, below, left and right. Addition of several racks without accessory, no personal variation. Basic rack without power connection; refer to part H/I for further informations and order numbers (connection concepts). $HxWxD = 1825 \times 800 \times 1100 \text{ mm}$ including: - installation preparation - packing - accessory pack including: Server addition (var.installation material) Manual German / English A Α


Please contact PRIMERGY PM or project support.


System configurator and order-information guide FTS PRIMECENTER Rack Status 2012-05-29


A	System configurator and order-information g FTS PRIMECENTER Rack Status 2012-0		
Build in Basic Units			
	For PRIMERGY Servers equal or higher than S4 generation. RMK's and cable management		
To ensure that a 19" PRIMERGY Server or PRIMERGY Subsystem			
can be mounted into the rack ex works, you have to order	can be ordered as options.		
one of the following "mounting kits for 19" PRIMECENTER Racks"	Please see related system configurators!		
out of the relevant configurators once per Server or PRIMERGY Subsystems.			
Additionally per PRIMERGY Server or PRIMERGY Subsystem	S26361-F2734-L14 Adapterkit to DC- and PC- racks		
the service "Rack installation ex works" has to be ordered.	Adapterkit to DC- and PC- racks		
Ordering this service includes assembly of the systems,	adaption of "old" classic- or DC- rack mounting		
complete cabeling and labelling of the cables.	kits to PRIMECENTER rack mounting kits		
	e.x. 670-xx, E200, Bxx0, RC21, UPS		
The 12/24/38/46 U rack is delivered fully equipped, and all LC-	contens different adapter angles		
racks are delivered mounting kits and cabling preinstalled.	Contains no adapter angles and		
Stacked racks will be delivered separat.	no cable management.		
The following listing is provided for information only and	If a server or storage subsystem from the 3rd party rack is to be added into the PRIMECENTER Back		
gives you an even new of the available meaning kite.			
For informations about build in PRIMEPOWER and LoB Storage	you have to order the following numbers:		
products, please refer to the corresponding configurator.			
	S26361-F2201-E20 Cable management		
Included in basic unit Depth-variable from 650 - 790 mm	for 19" DC- PC- Rack		
RMK D/P/3rd P Racks telescopic rails for PRIMERGY RX200 (1 U)	Additionally an adapter angle has to be ordered		
	according to size and weight of the 19" component:		
Included in basic unit Depth-variable from 710 - 815 mm	S26361-F2735-L10 adapter angle up to 50KG		
RMK D/P/3rd P Racks telescopic rails for PRIMERGY RX300 (2 U)	S26361-F2735-L15 adapter angle up to 150KG,		
	or		
	S26361-F2735-L31 adapter angle up to 200KG		
Included in basic unit Depth-variable from 625 - 762 mm	If you want to integrate a third party server into the		
RMK D/P/3rd P Racks sliding rails for PRIMERGY RX100 (1 U)	DataCenter Rack, above mentioned positions also		
	have to be ordered.		
Included in basic unit Depth-variable from 625 - 762 mm	In addition to the servers, you have to order the		
EBS D/P/3rd P Racks telescopic rails for PRIMERGY RX600 (3 U)	original mounting kits		
Included in basic unit Depth-variable from 647 - 810 mm			
EBS D/P/3rd P Racks telescopic rails for PRIMERGY RXI600 (4 U)			
	This service is to be ordered once per installable server/		
Included in basic unit Depth-variable from 645 - 785 mm	storage subsystem, in order to get the server /		
EBS D/P/3rd P Racks sliding rails for PRIMERGY BX600 (7 U)	storage subsystem mounted into the PRIMECENTER rack.		
	In case of all PRIMECENTER LC Racks, this service		
	has to be ordered to get the mounting kits and the cables installed		
SNP:SY-F1647E301-P S26361-F1647-E302 S26361-F1647-E100			
	Rackconfigurations with a shipping weight		
Rack-mounting ex factory Rack-mounting ex factory Rack demounting server			
for all servers and subsystems only for Primergy SX10 Service fee, once per r			
RX100, RX200 All servers will be shipe			
for PCRII: 12 - 38U, as			
for PCRII: 46U, must-			
for LC-Rack 38U: as a			
for LC-Rack 46U: mus	st-component		

В

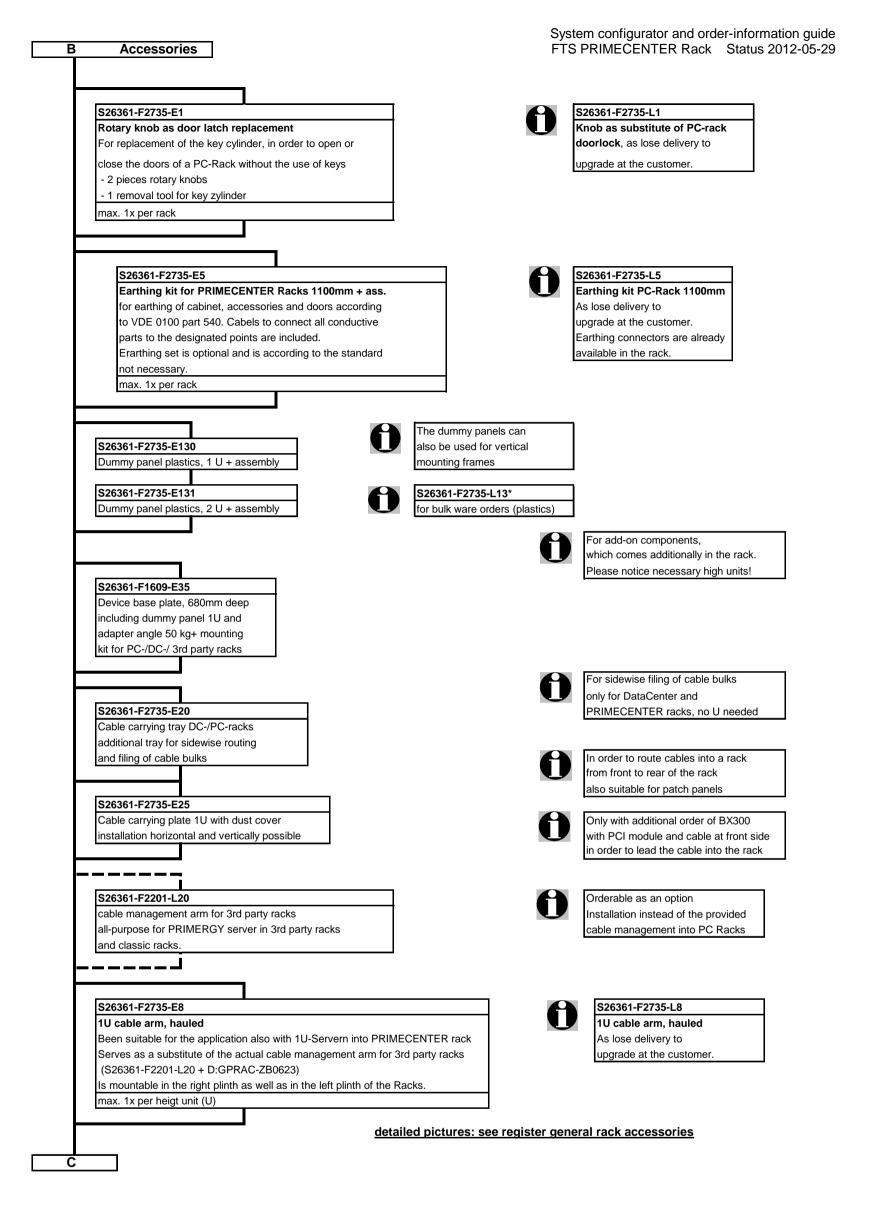

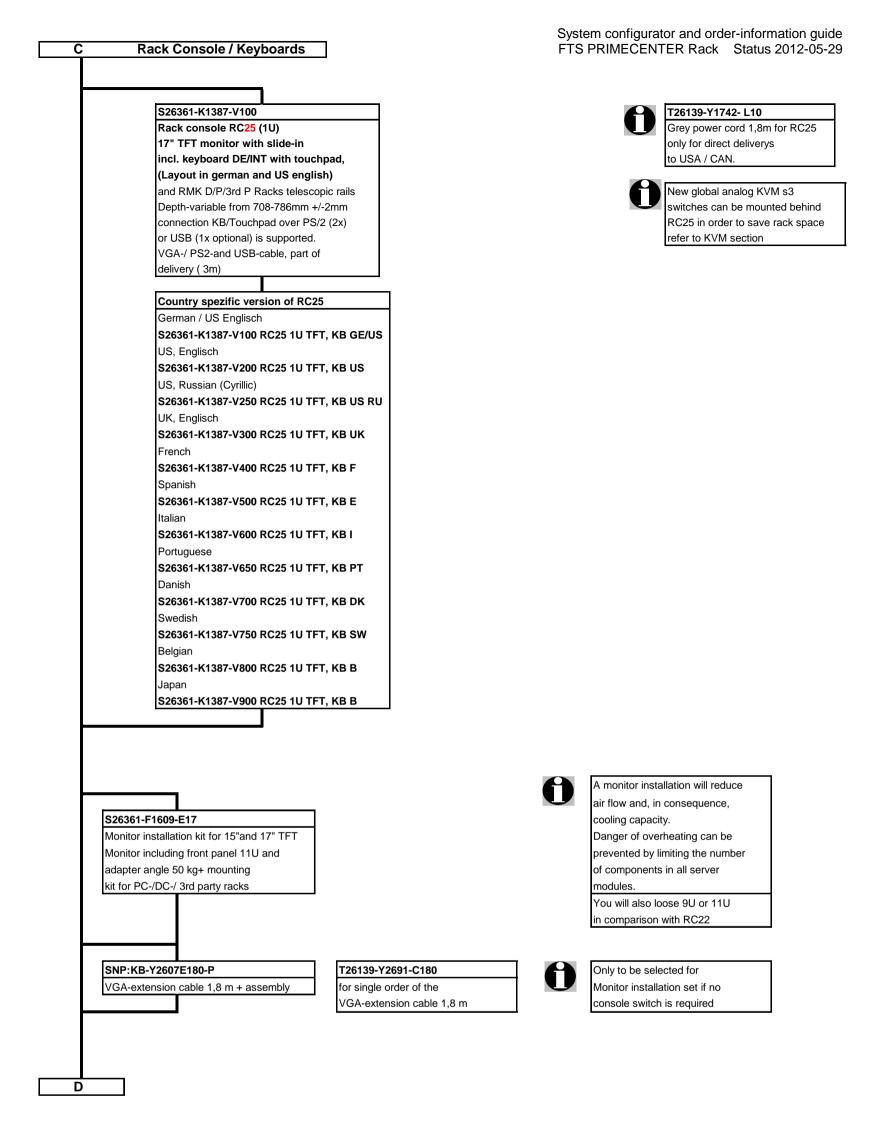

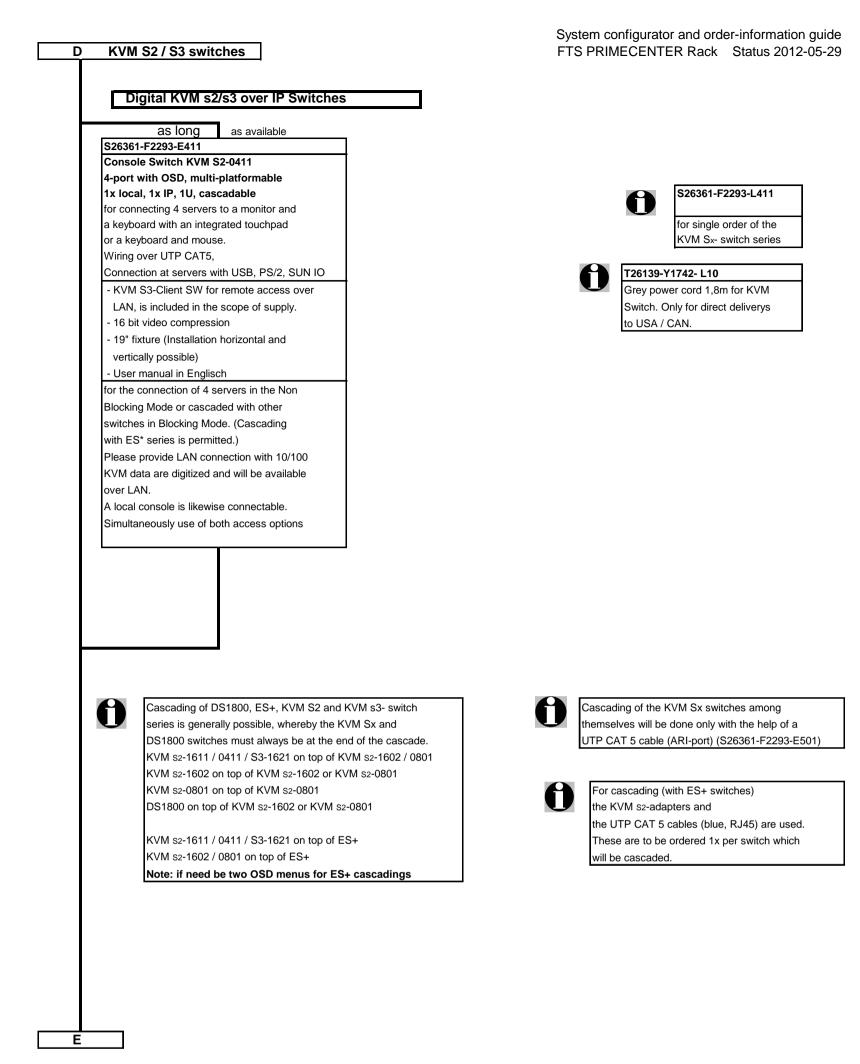

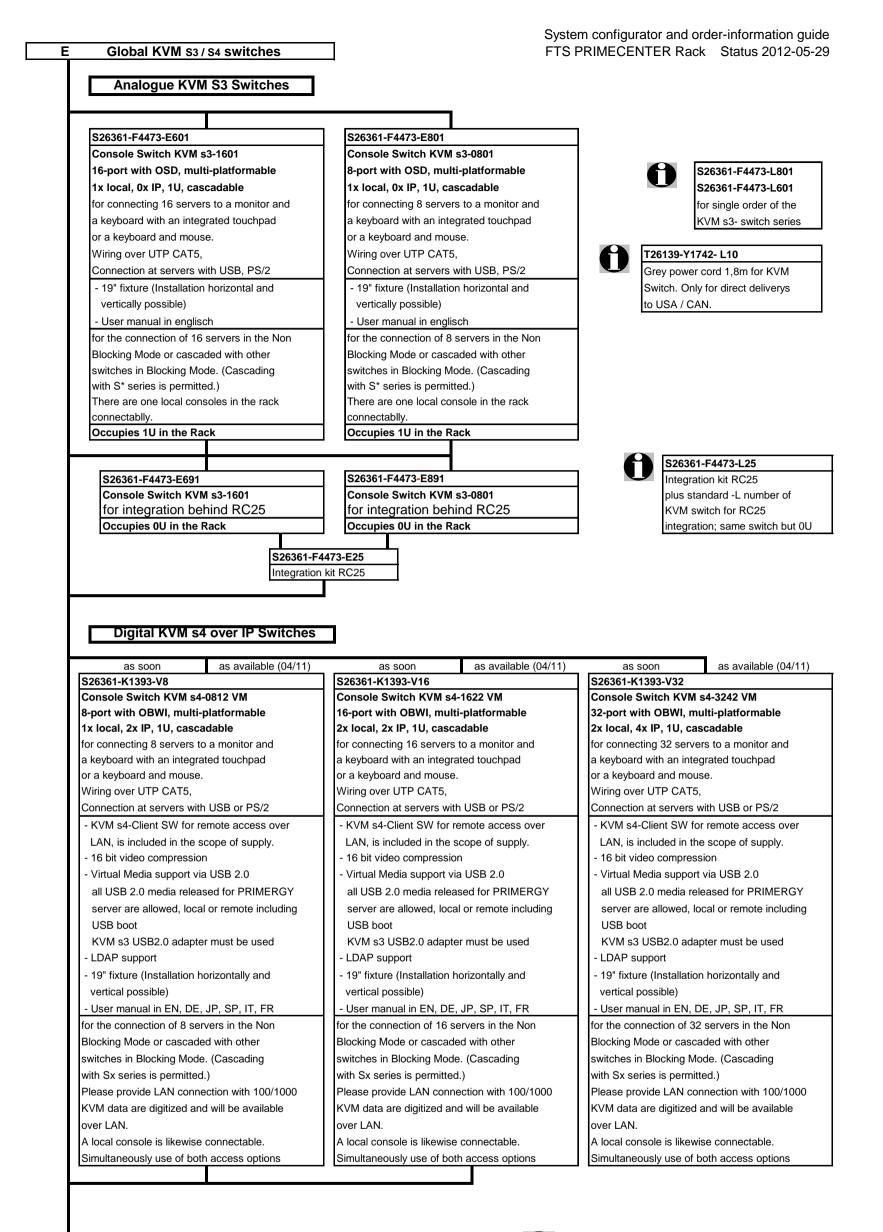



F

Cascading of KVM s2 /s3 and KVM s4- switche


series is generally possible, whereby the KVM s3 switches must always be at the end of the cascade with s2 switches. KVM s4-3242/1622/0812 on top of KVM s3-1601/-0801 KVM s4-3242/1622/0812 on top of KVM s2-1602/-0801 KVM s3-1601/0801 on top of KVM s2-1602/-0801




Cascading of the KVM S2 switches among themselves will be done only with the help of a UTP CAT 5 cable (ARI-port) (S26361-F2293-E501)



For cascading with analoge S3 switches the KVM s2-adapters and the UTP CAT 5 cables (blue, RJ45) are used. These are to be ordered 1x per switch which will be cascaded.

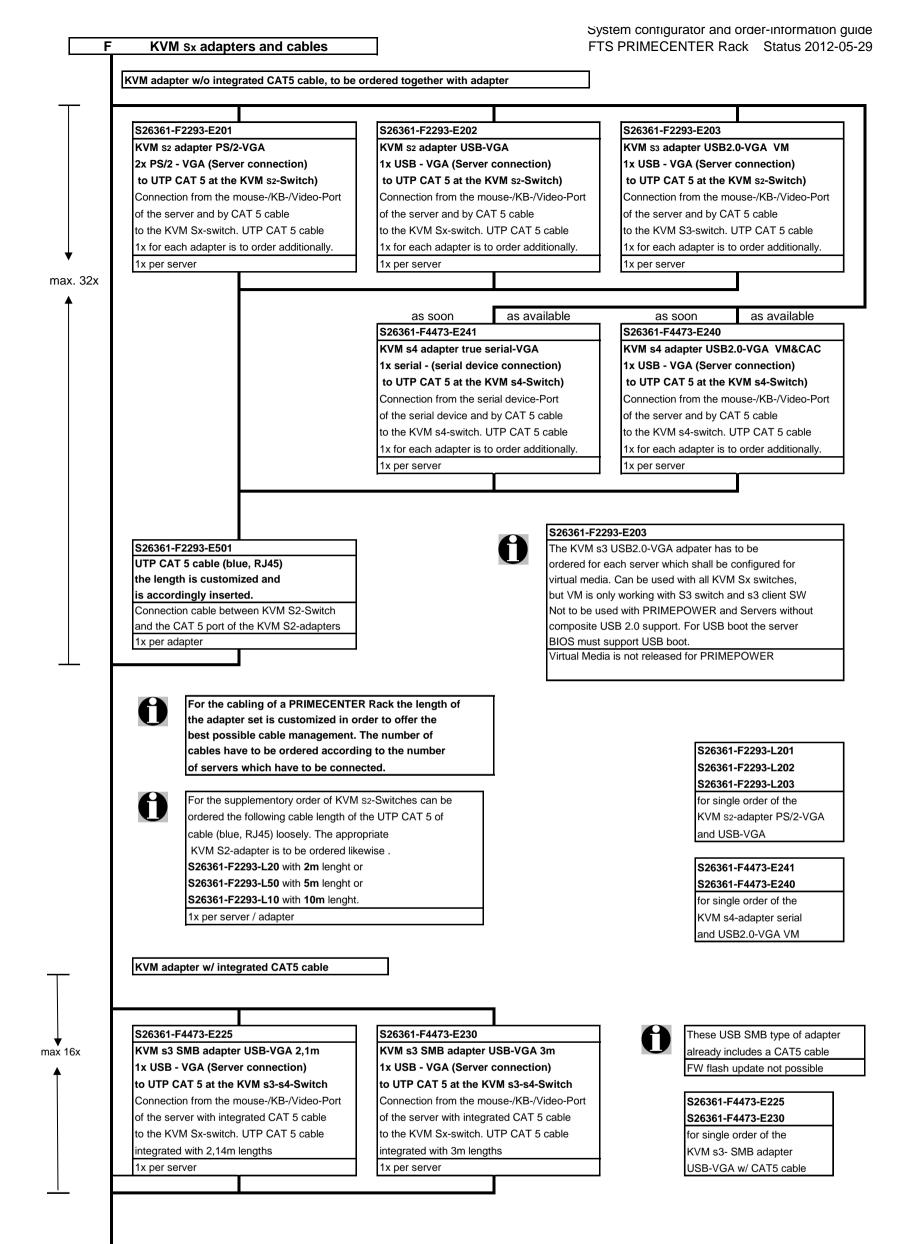




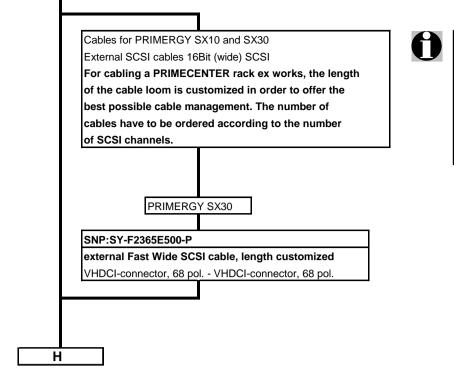



G

If a PRIMERGY SX10 / SX30 is build in, the following cables must be selected according to the "PRIMERGY SX10 / SX30 cabling " All cables are fixed permanently in the rack. The number of items to be ordered with respective length, depends on the number of SCSI channels to be connected. Attention! Only the cables mentioned here, may be ordered for external storage systems, if the rack is to be cabled ex factory.

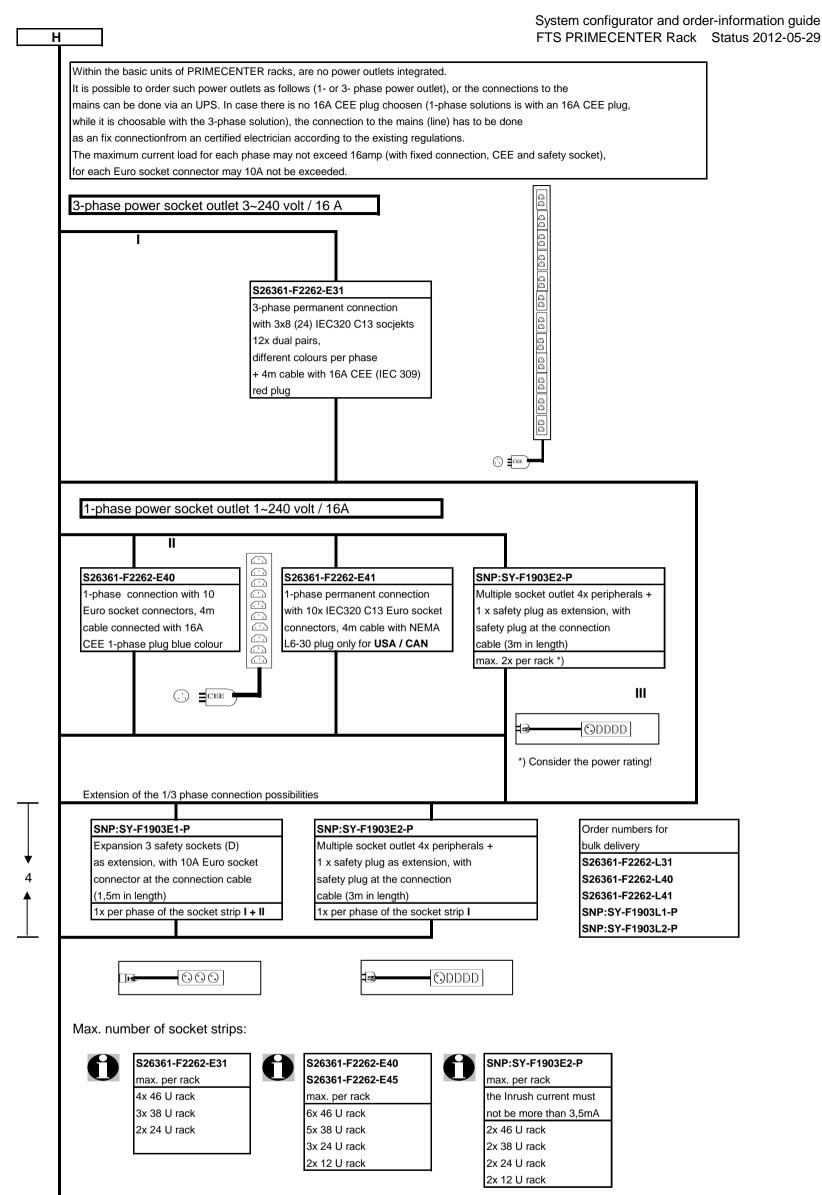




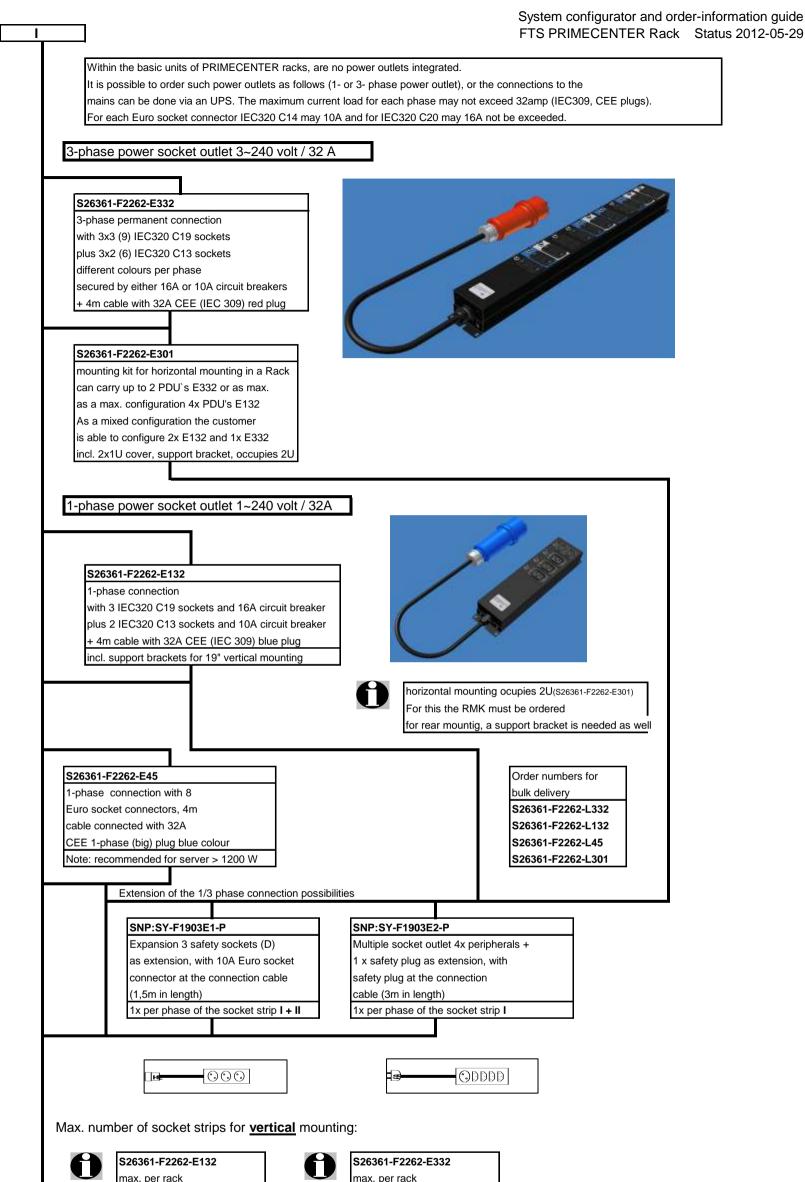


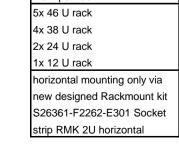

J


max. por raon
2x 46 U rack
2x 38 U rack
1x 24 U rack
0x 12 U rack
horizontal mounting only via
new designed Rackmount kit
S26361-F2262-E301 Socket
strip RMK 2U horizontal

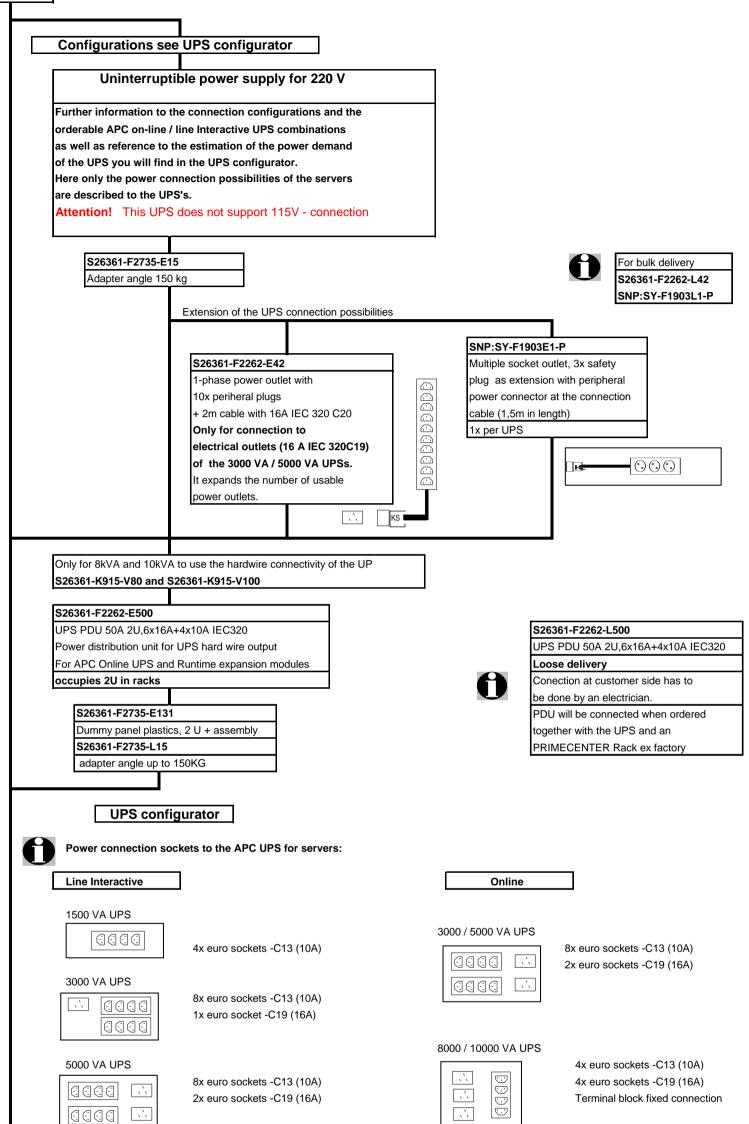

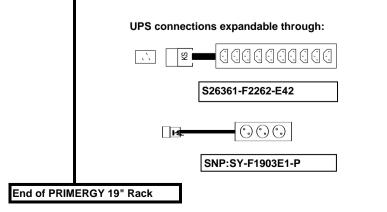


. I



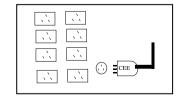

8x euro sockets -C19 (16A) 1x IEC309 (CEE) Blue

Configuration Examples KVM S2-1602 Switch

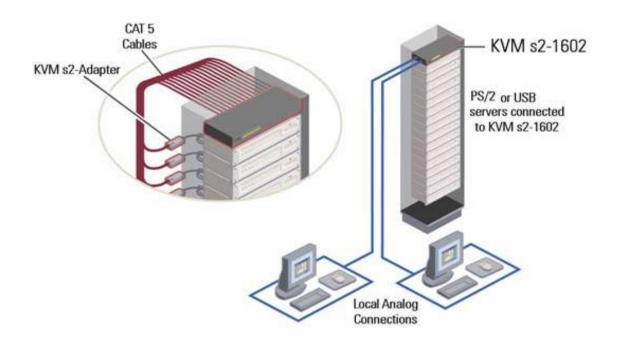


Bestellhinweis:

S26361-F2293-E602: Konsolswitch KVM S2-1602 S26361-F2293-E201: KVM S2-Adapter PS/2-VGA S26361-F2293-E202: KVM S2-Adapter USB-VGA

S26361-F2293-E501: UTP CAT 5 Kabel (Blau, RJ45)

Configuration Examples KVM S2-1611 Switch

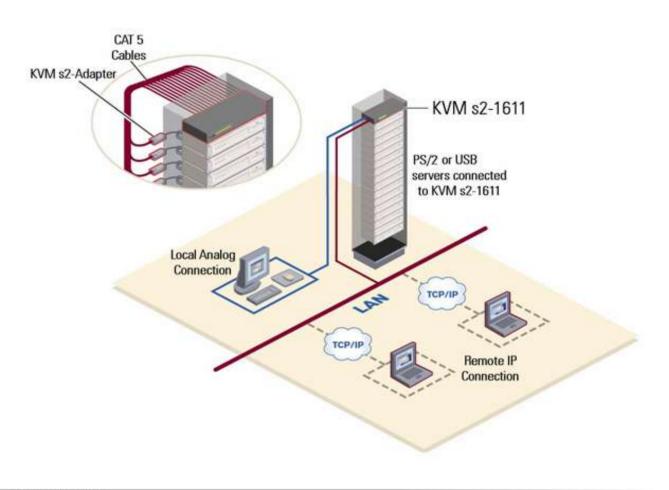


Bestellhinweis:


S26361-F2293-E611: Konsolswitch KVM S2-1611 S26361-F2293-E201: KVM S2 adapter PS/2-VGA S26361-F2293-E202: KVM S2 adapter USB-VGA

S26361-F2293-E501: UTP CAT 5 Kabel (Blau, RJ45)

Configuration examples cascade with KVM S2-1602 and KVM S2-1611 switch

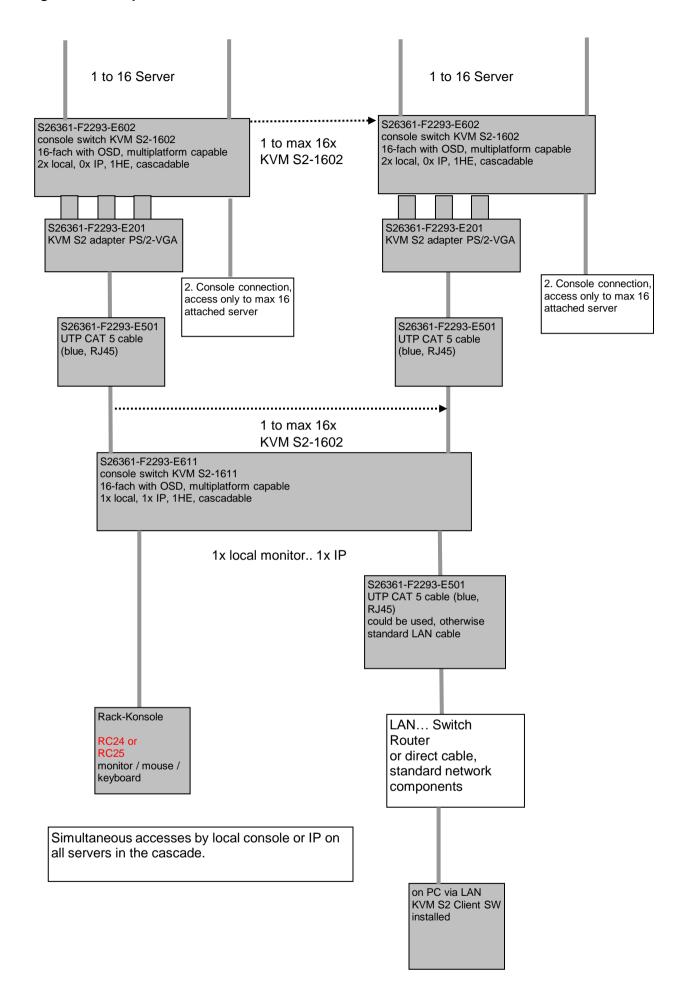

IB Switch Configuration

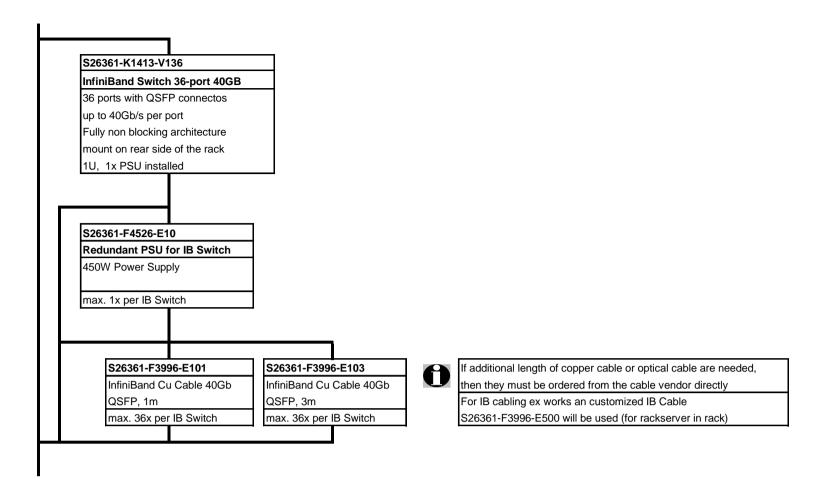

System configurator and order-information guide :

FibreCAT® TXF

Rack Backup Subsystem:

The FibreCAT TXF is an innovative, easy-to-use, flexible and economical rack enclosure for backup devices. With its wide range of supported backup devices with SAS or USB interfaces, it is best suited to consolidate data backups for rack-based servers in PRIMECENTER and third-party racks.

Available backup drives:

4 x 5,25 "with 1.6" height (HH) per I/O Modul (SAS or USB) for accessible drives

3U

- SAS: LTO5 HH, LTO4 HH, LTO3 HH

- USB DDS Gen5, DDS Gen6, RDX

More information:FibreCAT TXF Configuratorhttp://docs.ts.fujitsu.com/dl.aspx?id=61776716-c73f-4e57-9d3a-19821396a1f6

Fujitsu Technology Solutions x86 PRIMERGY Server

20 von 26

General LAN-Cabling

PRIMERGY Serve	er Cable- Nr.	Lengt	th		-Switch -F3417-E1
		2, 3, 5m	5, 10, 15m		
TX150 S7	• S26361-F3417-E500 S26361-F3417-L3/L505/L510/L515	x	x	•	x
TX200 S6	 \$26361-F3417-E500 \$26361-F3417-L3/L505/L510/L515 	x	x	•	x
TX300	 \$26361-F3417-E500 \$26361-F3417-L3/L505/L510/L515 	x	×	•	x
<u>S5, S6</u> RX100	S26361-F3417-E500 S26361-F3417-L3/L505/L510/L515	x	×	•	x
S6 RX200	 \$26361-F3417-E500 \$26361-F3417-L3/L505/L510/L515 	x	¥	•	x
S6 RX300	S26361-F3417-E500 S26361-F3417-L3/L505/L510/L515	x	×	•	x
<u>S5, S6</u> RX600	 \$26361-F3417-E500 \$26361-F3417-L3/L505/L510/L515 	x	x	•	x
S4, S5 PRIMEQUEST 5×	x S26361-F3417-E500 S26361-F3417-L3/L505/L510/L515	х	x	•	x
APC-USV'en LAN on Board	 \$26361-F3417-E500 \$26361-F3417-L3/L505/L510/L515 	x	¥	•	x
Mastergard USV'e	526301-F3417-L3/L505/L510/L515	x	×	•	x

• LAN RJ45

LAN-Switches means: all Storage-LAN Switches as well as the Ethernet-Switch S26361-F3417-E1

LAN-CAT 5 Enhanced, customized, order number: S26361-F3417-E500

LAN-CAT 5 Enhanced, I=5m, Order-number: **S26361-F3417-E505** (if available)

LAN-CAT 5 Enhanced, I=15m, Order-number: S26361-F3417-E515 (if available)

LAN-CAT 5 Enhanced, I=3m, Order number: S26361-F3417-L3

LAN-CAT 5 Enhanced, I=5m, Order-number: S26361-F3417-L505 (if available)

- LAN-CAT 5 Enhanced, I=10m, Order number: S26361-F3417-L510
- LAN-CAT 5 Enhanced, I=15m, Order-number: S26361-F3417-L515 (if available)

Additional informations about cabling

Other Informations about LAN cabling / controller releases e.g.) see the respective configurator

Use also above overview only with the 5m-, 10m-, 15m-cable to the wiring for the selection of the rack-spreading LAN wiring please.

• LAN RJ45

Cross-Over LAN cable, quality= CAT 5 E, is needed for INTERCONNECT

LAN-CAT 5 E, Cross-Over, length = 5m, Order-number: S26361-F3482-E5 (if available) LAN-CAT 5 E, Cross-Over, length = 5m, Order-number: S26361-F3482-L5 (if available)

IB-Cabling

PRIMERGY Server	Cable- Nr.	Length	IB-Switch S26361-K1413-V136
InfiniBand Controller S26361-F4475-E102/E202 in		1 or 3 m customized	max. 36 ports
RX200 S6	• S26361-F3996-E500	x	•
RX/TX300 S6	• S26361-F3996-E500	x	•
RX600 S5/S6 RX900 S2	• S26361-F3996-E500	x	•
IB ConnectionBlade	• S26361-F3996-E500	x	•
CX122 S1	• S26361-F3996-E500	X	•
CX120 S1 (only E202)	• S26361-F3996-E500	x	•

• InfiniBand QSFP (connector in SA, 1x with E102 and 2x with E202)

and to other -F4475-E102/E202

InfiniBand Cu cable 40Gb, customized, order number: S26361-F3996-E500 (for cabling in SA) InfiniBand Cu cable 40Gb, I=1m, Order-number: S26361-F3996-E101 (for loose delivery of the server ex works) InfiniBand Cu cable 40Gb, I=3m, Order-number: S26361-F3996-E103 (for loose delivery of the server ex works) InfiniBand Cu cable 40Gb, I=1m, Order-number: S26361-F3996-L101 (for loose delivery of the IB cable) InfiniBand Cu cable 40Gb, I=3m, Order-number: S26361-F3996-L103 (for loose delivery of the IB cable)

Additional informations about cabling

Other Informations about IB cabling / controller releases, see the respective configurator

Please use also the above mentioned selection of 1m and 3m IB Cu cable for the rack-spreading IB-cabling.

Information about Smart USV in the internet see:

https://partners.ts.fujitsu.com/com/products/servers/primergy/rackcomp/components/usv/Pages/default.aspx

general rack accessories


Please see "Rack Design Guide" also:

 $\underline{http://sp.ts.fujitsu.com/dmsp/docs/pf_rackdesignguide_en.pdf}$

S26361-F2735-L210

Reinforced tilting protection (PCR2-1100mm)

Verstärkter Kippschutz

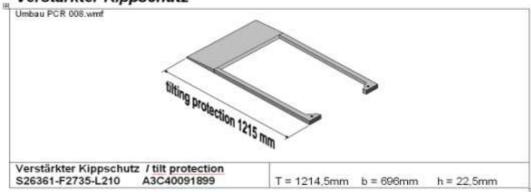

S26361-F2735-E7

Cable magmt. for 19" DC- PC- Rack

cable management for adding a server or storage subsystem from a 3rd party rack into the PRIMECENTER rack

System configurator and order-information guide FTS PRIMECENTER Rack Status 2012-05-29


S26361-F2735-L8

1U cable arm


cable arm for 1U PRIMERGY server, dragged for PRIMECENTER- and 3rd-party racks Detail: mounted 1U cable arm at the left sife of 19" profile open with Adobe Acrobat reader



View: front to rear open with Adobe Acrobat reader

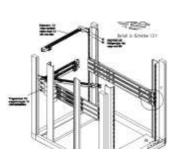

Rear view rack: 1U cable arms open with Adobe Acrobat reader

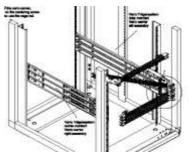

S26361-F2735-L130	Dummy panel 1U plastics for assembly in 19" rack
S26361-F2735-L131	Dummy panel 2U plastics for assembly in 19" rack
S26361-F2735-L10	Support bracket, max. load up to 15kg
S26361-F2735-L15	Support bracket, max. load up to 35kg
S26361-F2735-L31	Support bracket, max. load up to 50kg
S26361-F2735-L1	Rotary knob Rotary knob as door latch replacement For replacement of the key cylinder, in order to open or close the doors of a PC-Rack without the use of keys - 2 pieces rotary knobs - 1 removal tool for key zylinder max. 1x per rack
S26361-F1609-L35	S26361-F1331-L51 Add-on base plate, 680mm deep 1U for assembly in 19" rack (1U), with support bracket, anthracite
S26361-F1609-L17	Monitor mounting kit 11U f.17"u.15"-displays for assembly in 19" rack, base plate and front panel + support bracket 1U max. load up to 50kg, without monitor
S26361-F2735-L500	cage nut set, M5, t=2,5mm
	Content: 50 pieces orderable to boxes, server and racks
S26361-F2735-L510	SCREW SET IO-BOX Rack Mounting
	Content: M5X14-TORX screws, cage nuts, rosettes; each 16 pieces orderable to IO-boxes, switches and racks

Changereport

Date	Ordernumber	Changes
2011-01-23	S26361-F4473-E/Lxyz	new global analoge KVM s3 & s4 adapter added
2011-01-21	S26361-F4473-E/Lxyz	new global analoge KVM s3 Switch generation added & RC25 integration kit / switch
2011-01-21	S26361-K1393-Vxyz	new global digital KVM s4 Switch generation added
2010-12-01	S26361-K1387-Vxyz	Rackconsole RC25 - now available
2010-08-19		Config TXF change; LTO5HH new
2010-07-21	S26361-F1331-L200/-L300	Kits no longer available
2010-07-21		register deleted: SX30 Lines; SX30 SCSI-Cables; SX10 SCSI-Cables
2010-01-13	S26361-F2735-E510/L510	IO-Box screw set:16x M5X14-TORX, cage nuts, rosettes
2008-09-01	S26361-K1228-V100	register: Information Config TXF added
2008-08-29		register: configuration diagram updated
2008-08-28		register: KVM S2-Switch, LAN-Cabling, rack accessoires updated
2008-08-28	F3417-E505/-E515	register: LAN-Cabling
2008-01-18		Minor text changes
2008-08-01	S26361-K1022-Vxx	LC Racks - new with bypass control as a standard and roller base as an option
2007-11-17	S26361-F2262-E500	New PDU 50A added
2007-09-26	S26361-F2735-E130/131	Dummy panel (plastics) 1U, 2U - now available
2007-09-26	SNP:SY-F1609E1-P*	Dummy panel (metal) 1U, 2U, 3U, 5U - no longer available
2007-02-28		register: general rack accessories and Information Config SX40 added
2006-11-28	S26361-F2735-E8	1U cable arm, hauled - now available
2006-10-30	S26361-F2734-E31	RMK 1 D/P/3rd P Racks telescopic rails for PRIMERGY C150/C200/TX150 (5 U) - no longer available
2006-09-12		Server Restriction for Virtual Media not applicable any more
2006-08-21	S26361-K826-V213	PRIMECENTER Rack 38 U 1100 deep - as soon as available
2006-08-14	S26361-F1647-E100	Rack demounting server ex factory, always(stating now) 1x part of the 46U-racks
2006-08-14	D:GPRAC-ZB0623	cable guide adapter and
	S26361-F2201-L20	cable management arm for 3rd party racks, optionally for PCR2 orderable
2006-07-24	S26361-F2262-E301	Socket strip RMK 2U horizontal - now available
2006-06-26	S26361-F3417-E500/L510	LAN-Cabling - from 2006-07-10 available
2006-05-24	S26361-F2829-E1	SCSI-Switch for Server Shield - no longer available
2006-05-24	S26361-F2293-E611	Console Switch KVM S2-1611 - no longer available
2006-04-24	SNP:SY-F1954E1-P	3-phase power cord 7m - no longer available
2006-04-24	SNP:SY-F1609E10-P	Monitor installation kit - no longer available
2006-03-24	SNP:SY-F2262E30-P	Socket strip 3x 5 plugs + assembly - no longer available
2006-03-24	SNP:SY-F2262E30-P	Socket strip 3x 5 plugs + assembly - no longer available
2006-03-17	S26361-F2293-E203	KVM s3-Adapter-USB20-VGA - as soon as available
2006-03-17	S26361-F2293-E621	Konsolswitch KVM s3-1621 - as soon as available
2006-03-17	S26361-F2293-E411	Konsolswitch KVM s2-0411 - as soon as available